




FULL STOCK

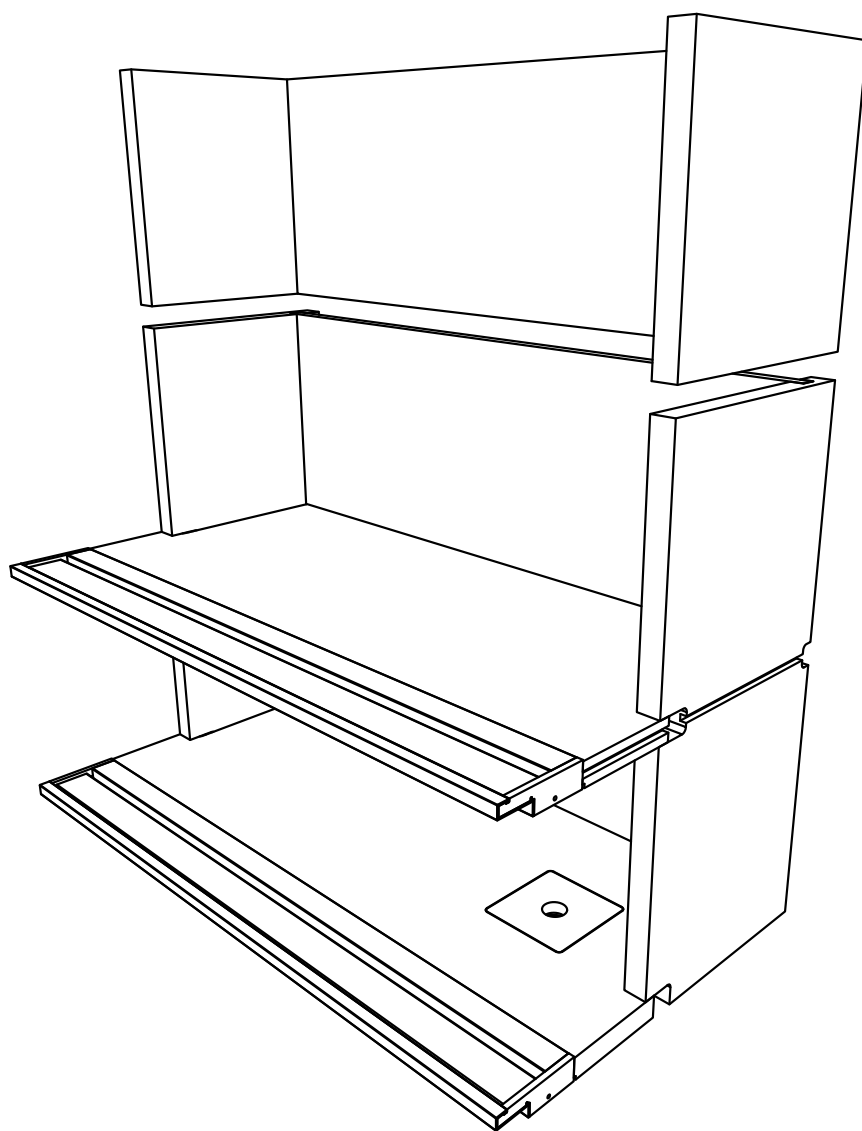


Tools:

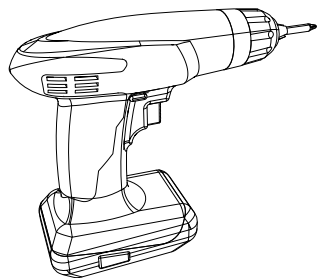

Electrical screwdriver

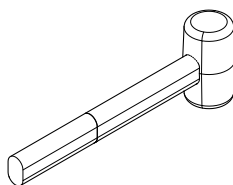


Rubber hammer

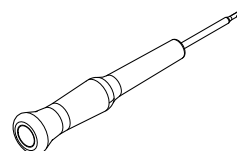



Precision screwdriver




1 Person ✗

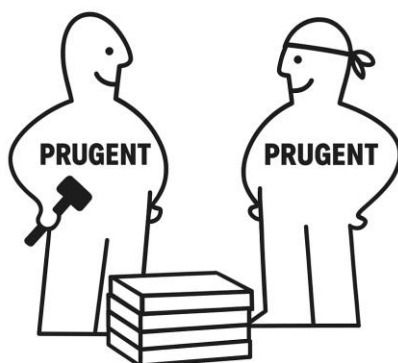


2 Persons ✓

 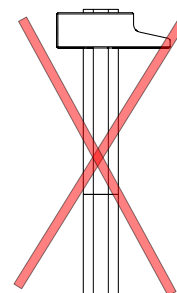


Additional components:

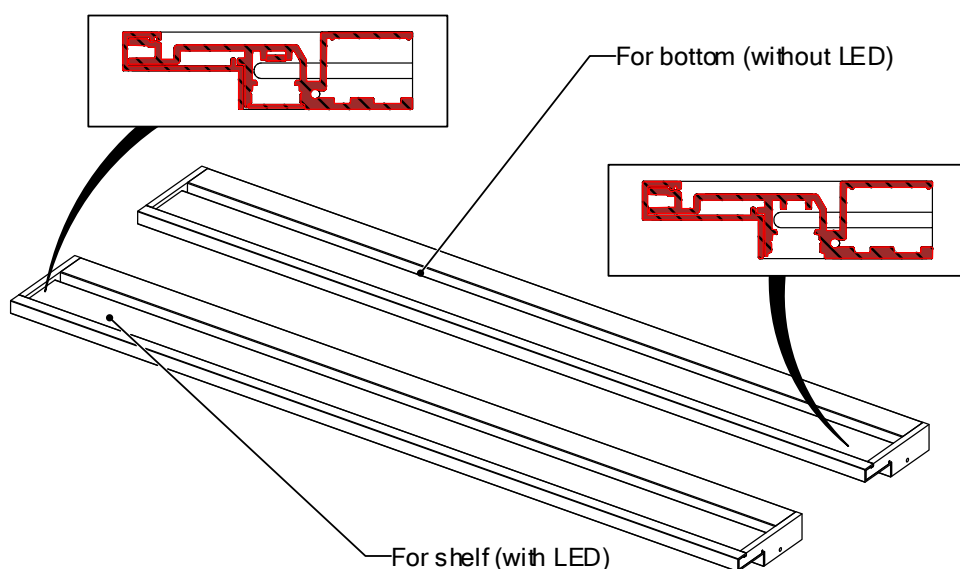


1

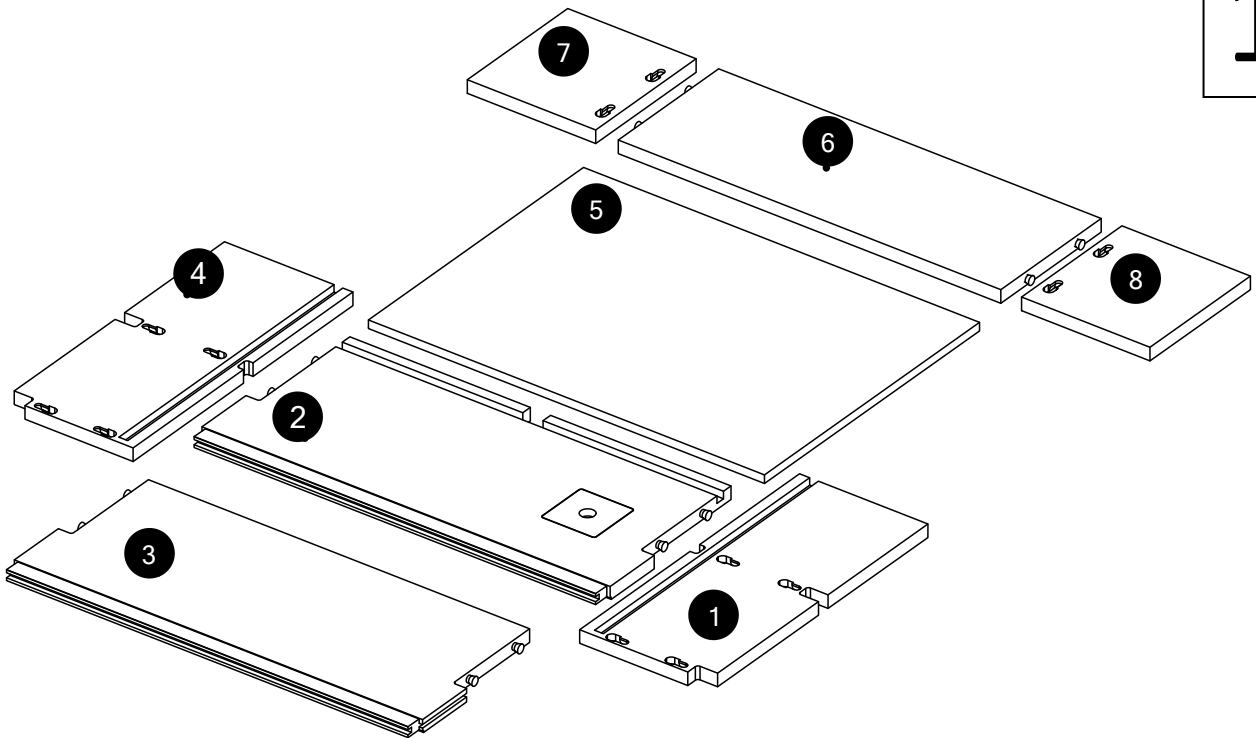


2

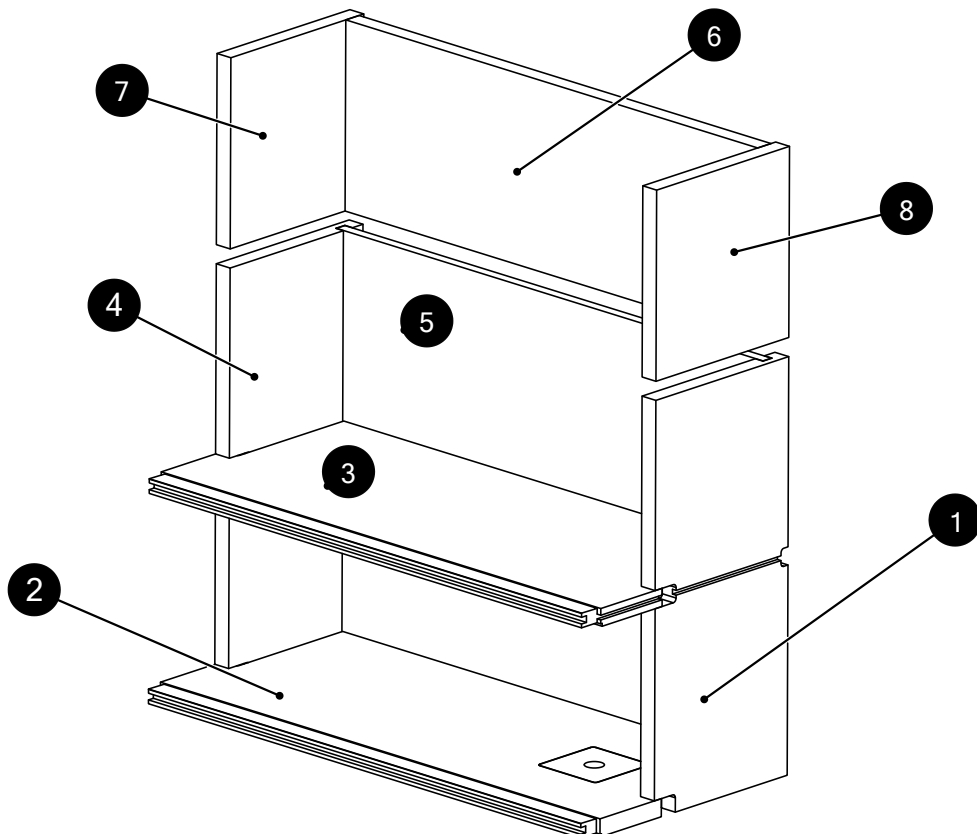


3

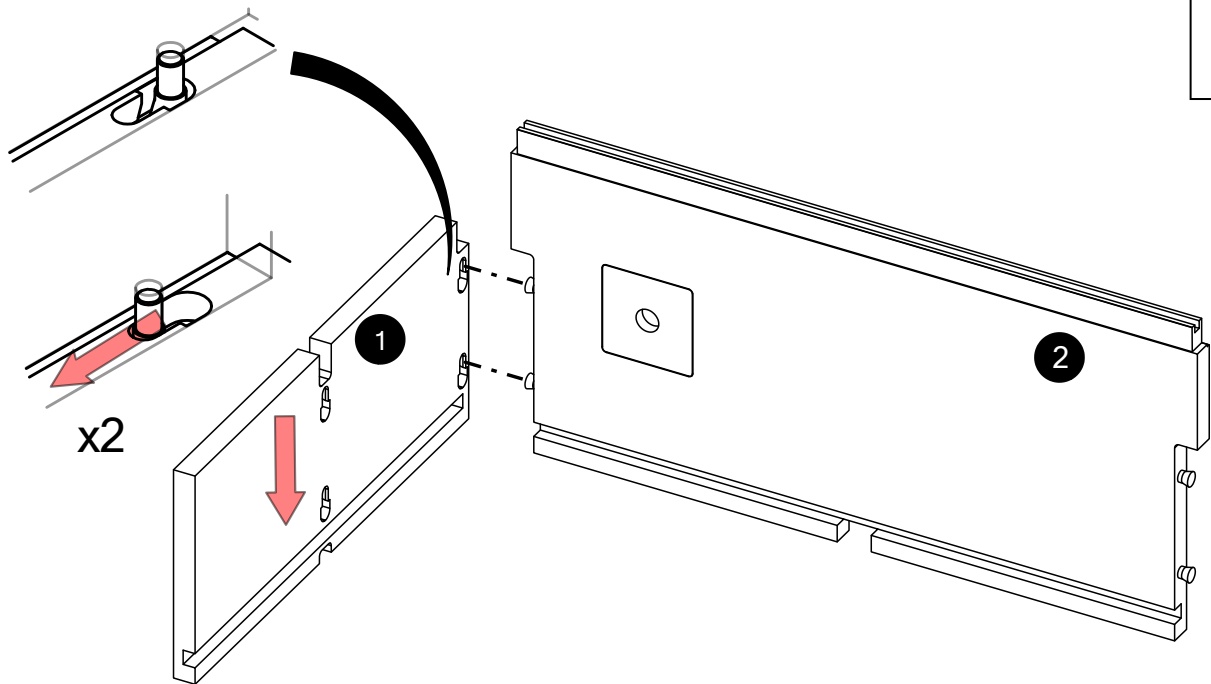


4

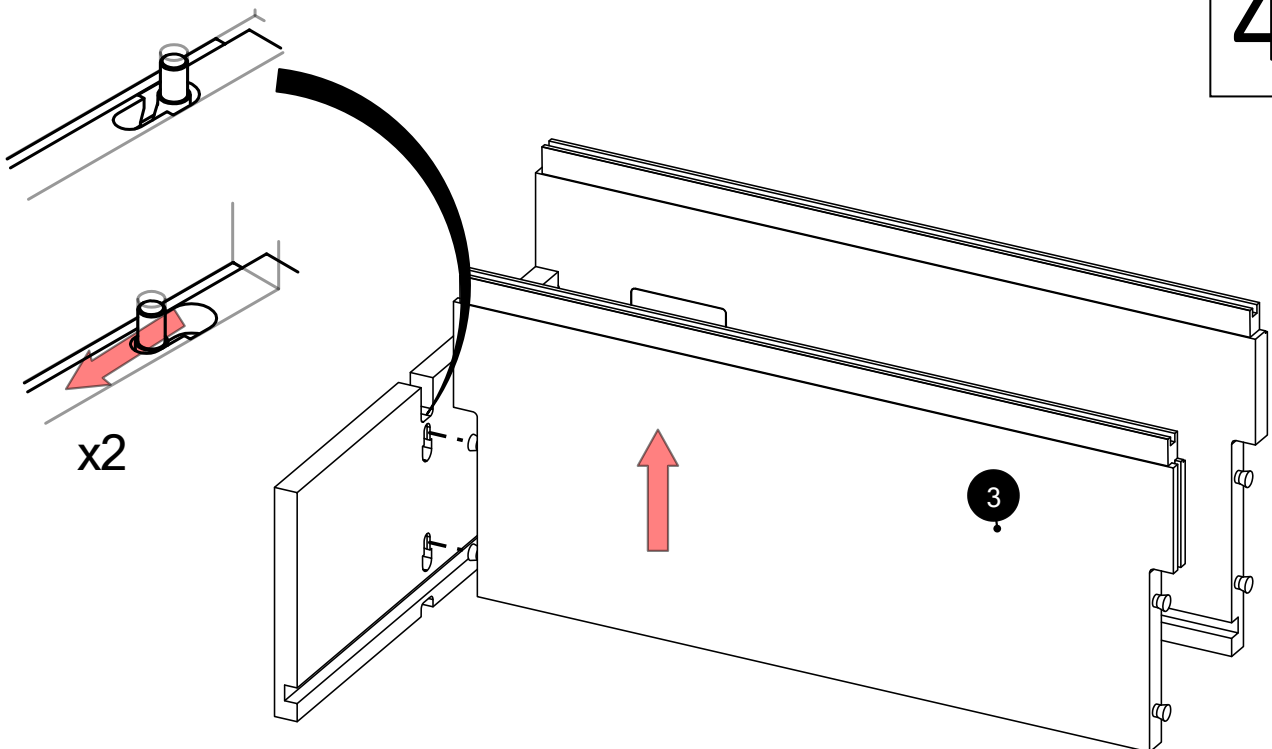


5

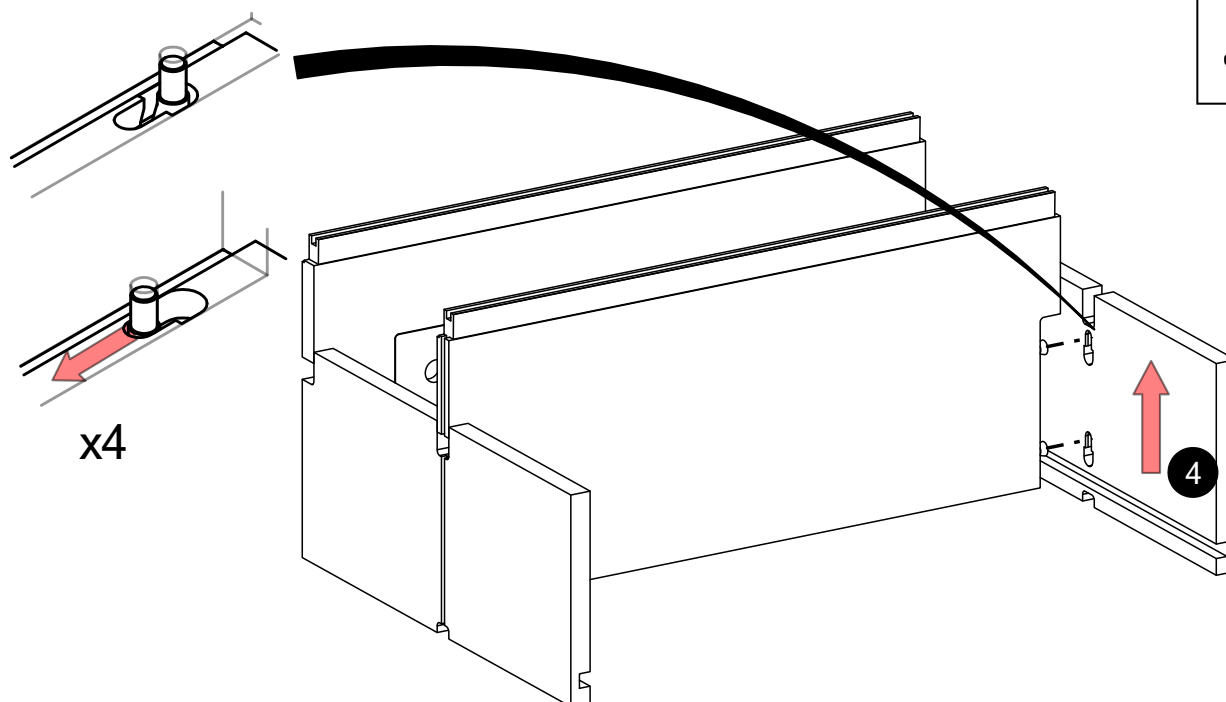


6

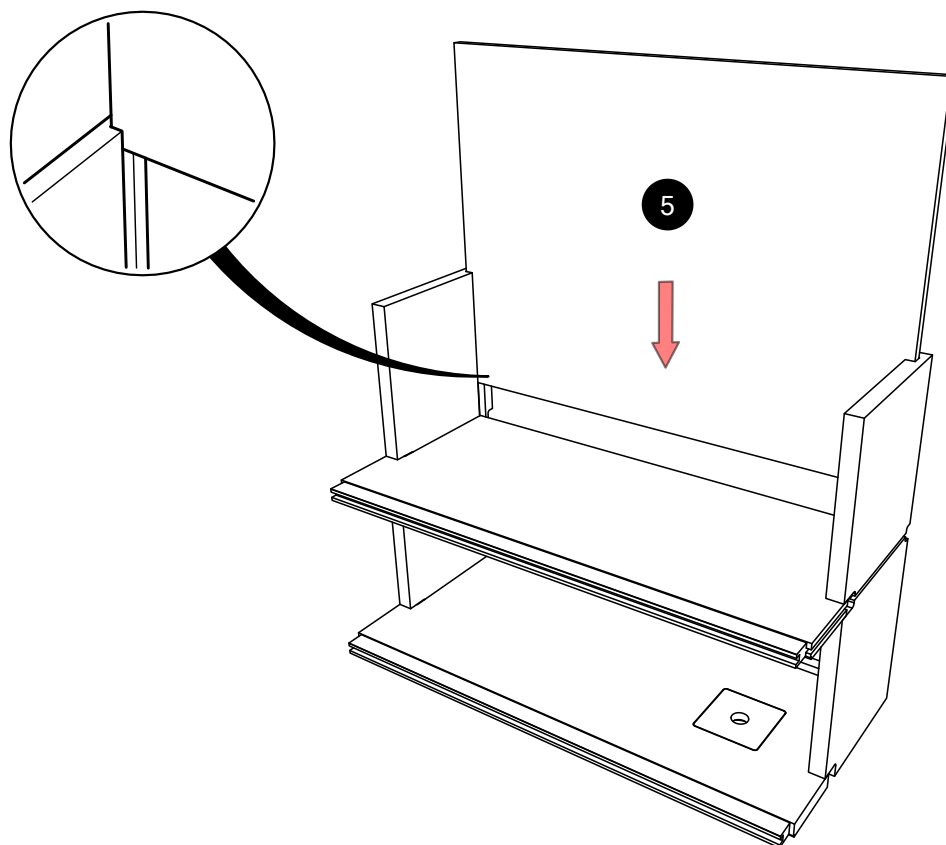


7

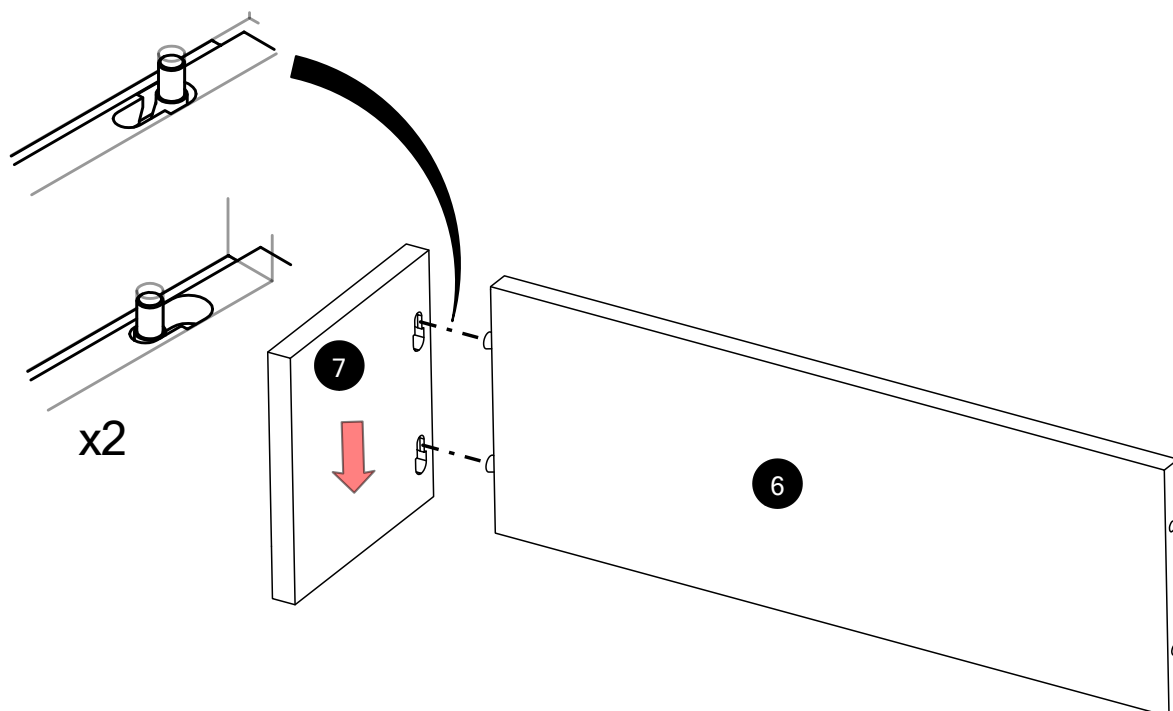

8

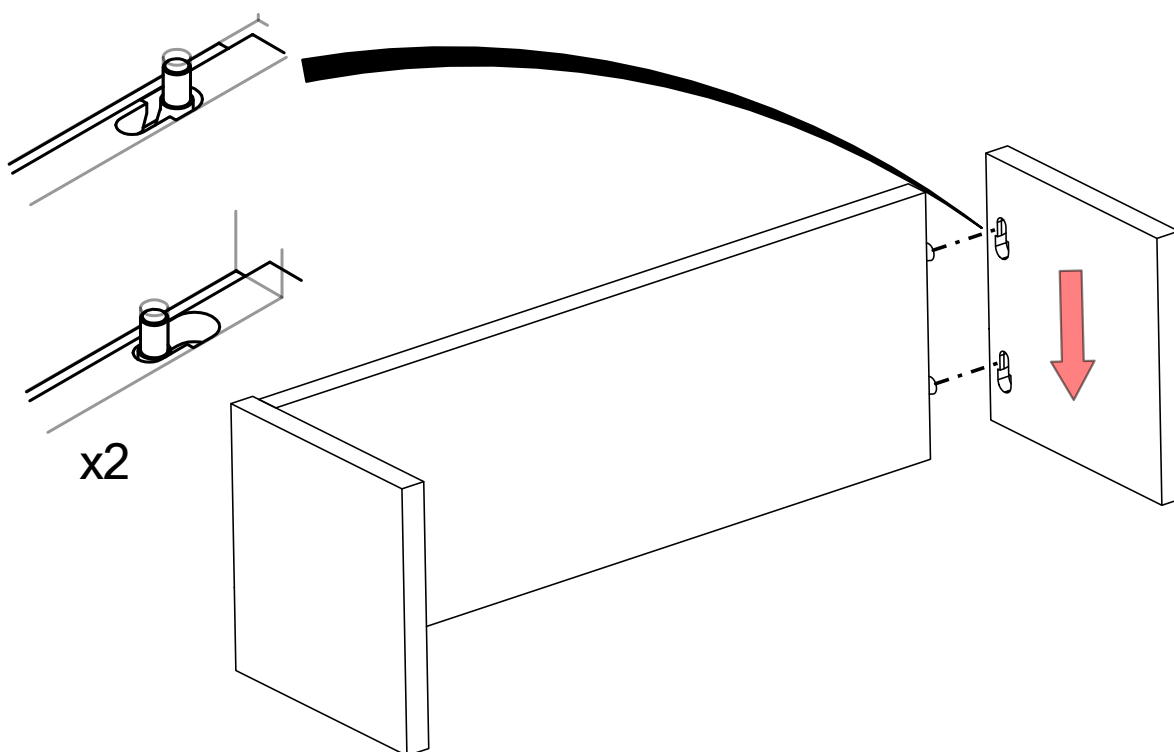


9a

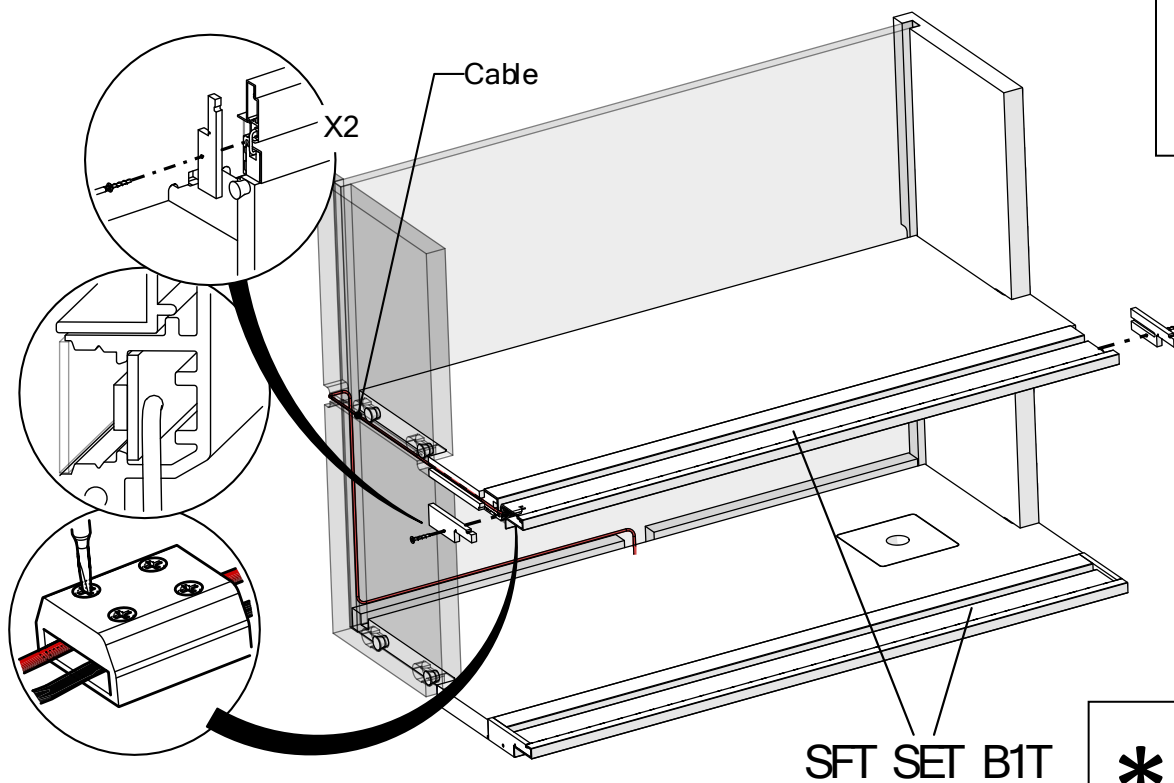


*1T

9b

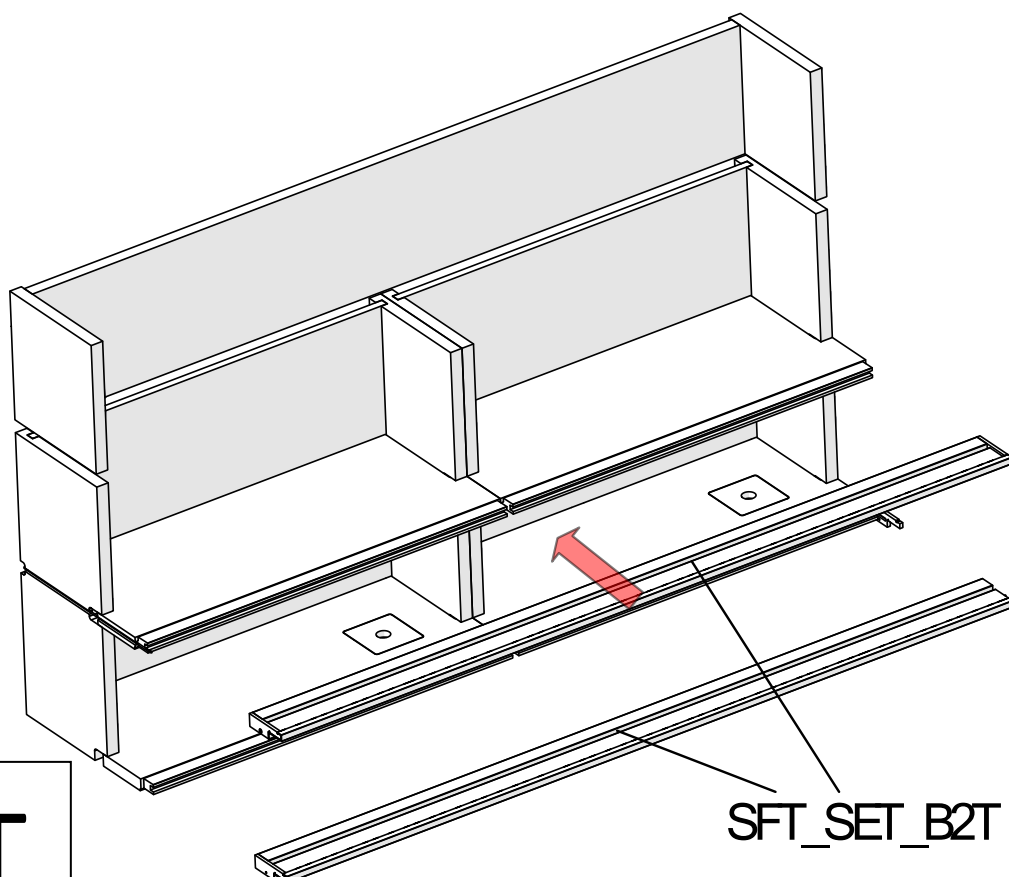


*2T

9c

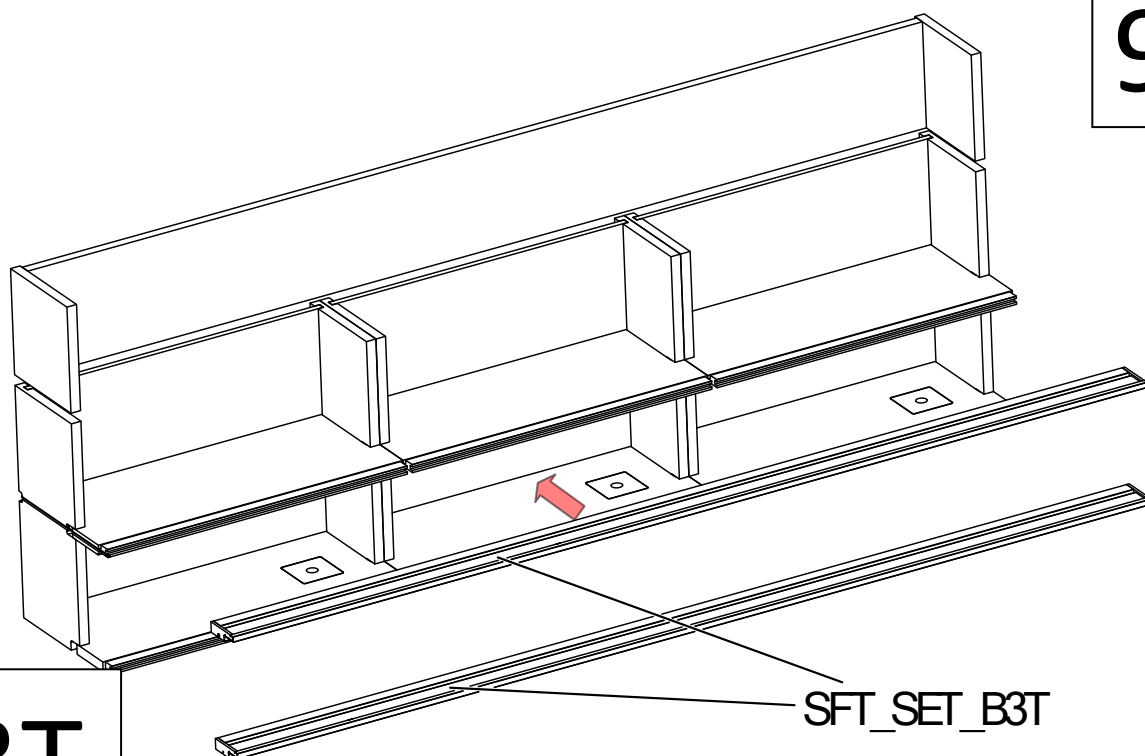

*3T


10a

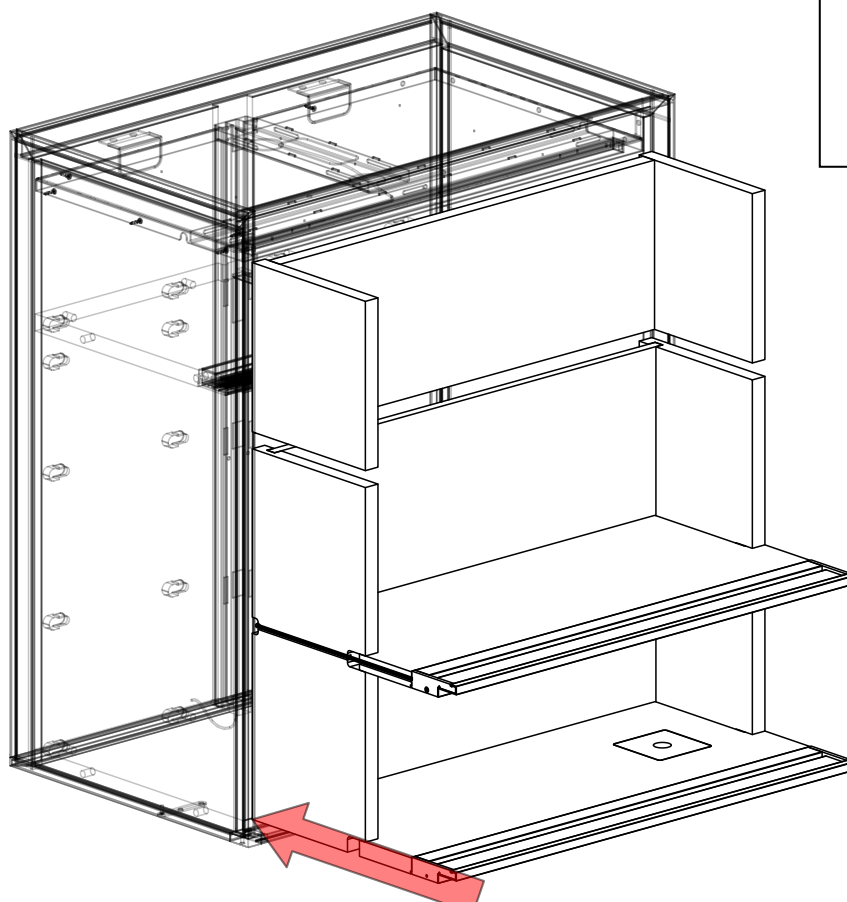

*1T


10b

*2T

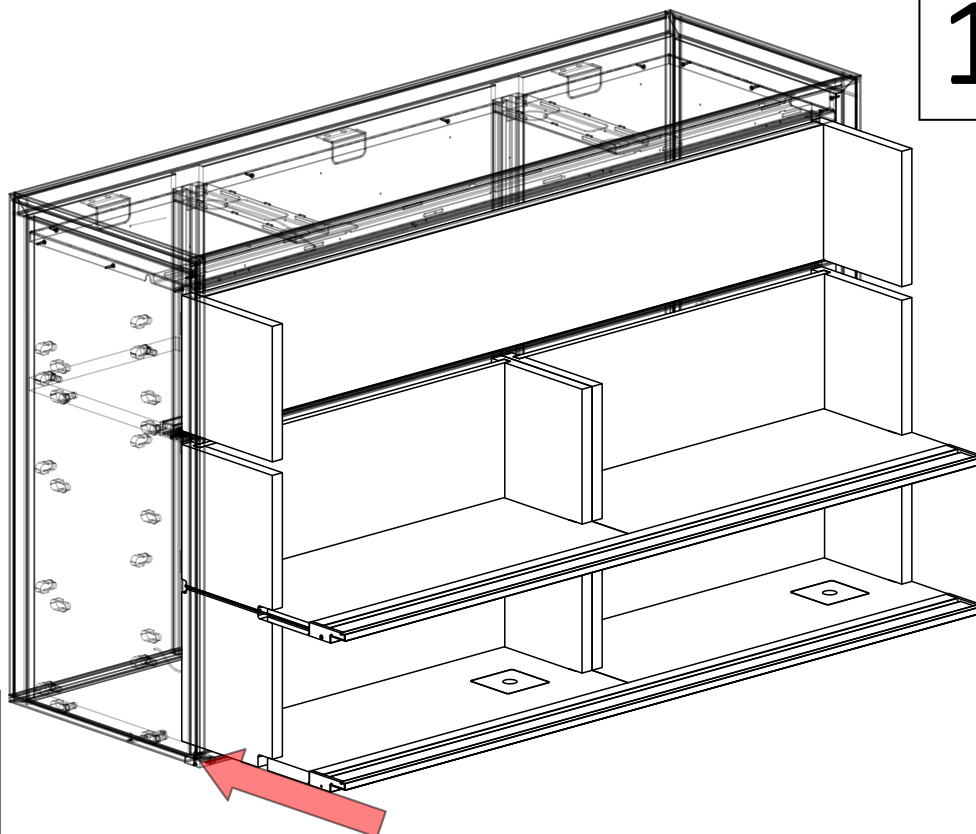

10c

*3T

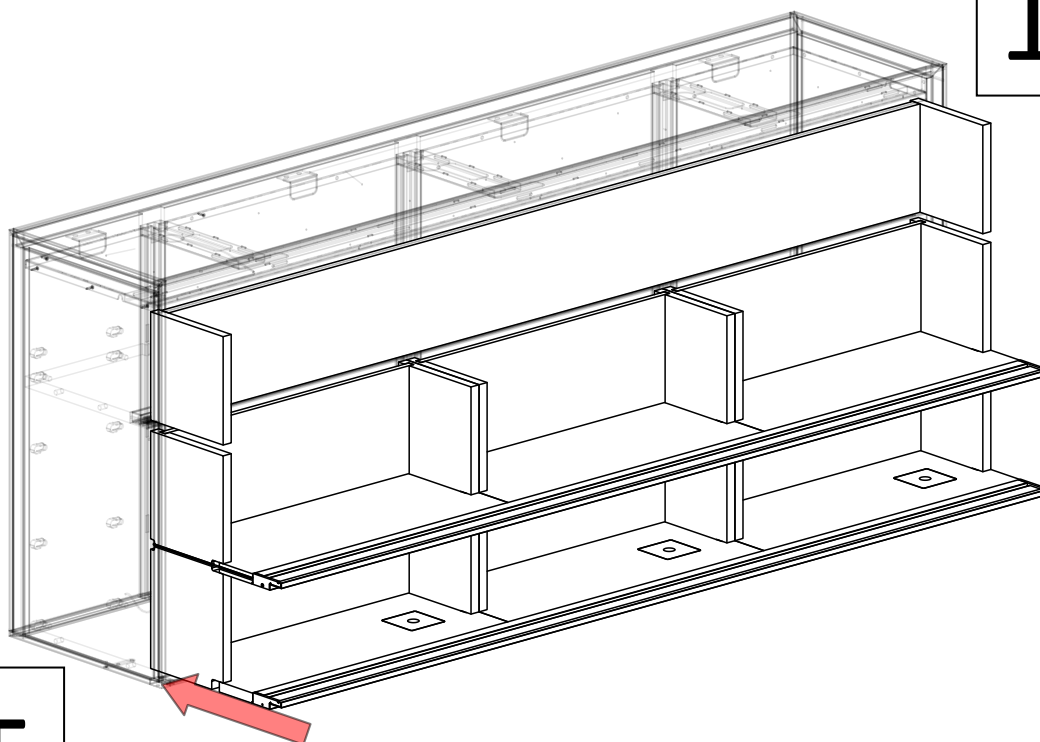



CARE AND MAINTENANCE INSTRUCTIONS

Furniture is an essential element of any store environment, combining functionality with aesthetic appeal. To preserve the quality and appearance of your furniture, regular care and proper maintenance are required. The following guidelines will help you maintain your furniture in excellent condition.

COMMON CAUSES OF DAMAGE

Surfaces can be damaged by the use of abrasive cleaning products or substances containing ammonia, bleach, acetone, perfume, alcohol, or other aggressive chemicals. Discoloration, warping, and cracking may occur due to prolonged exposure to direct sunlight, sudden temperature changes, or excessive humidity.

GENERAL CLEANING

- Use warm soapy water and a clean microfiber cloth.
- Take care not to scratch the surface.
- Some furniture may attract static electricity, causing dust to cling; in such cases, use an anti-static cloth.

Lacquered surfaces

- Wipe with a clean, dry microfiber cloth, or with a cloth wrung out in mild soapy water.
- Always dry the surface thoroughly with clean and dry cloth to prevent streaks or blotches.

Laminate surfaces

Laminate surfaces are durable and scratch-resistant but should never be used as cutting boards.

- Clean with a dry microfiber cloth, or a cloth wrung out in soapy water.
- Dry thoroughly afterwards to avoid marks or streaks.
- For stubborn dirt, use non-abrasive cleaning products designed for laminate surfaces.
- Difficult stains (e.g., smoke, makeup) can be removed carefully using gentle cleaning creams.
- Never use scouring pads or harsh abrasives.
- Marks from pens or markers may be removed with alcohol or acetone applied on a clean cloth.
- After cleaning with solvents, always rinse with clean water and dry with a soft microfiber cloth.
- Glass cleaner can be used to eliminate streaks after cleaning.
- Descalers must never be used, as they may cause permanent discoloration.
- Avoid furniture polish.

Metal surfaces

Furniture metals typically include aluminum, chrome-plated, stainless, or painted steel. These materials are generally resistant to dirt and liquids.

- Wipe with a microfiber cloth dampened with soapy water.
- Rinse and dry thoroughly to avoid streaks or water marks.

NEED HELP?

If you require additional guidance or information regarding the care and maintenance of our furniture, please contact: maintenance@chanel.com